



To Assemble:

Step 1: Carefully attach the pump (C) to the hose, making sure to place the pump in the center of the bottom pots (B).

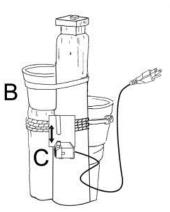


Step 2: Align the top solar post light (A) to pot pillar (B).

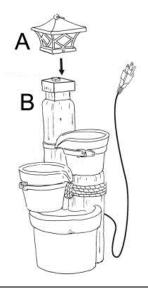

Step 3: Fill the basin (B) with clean water, making sure the pump (C) is fully submerged. **Note:** The maximum water level should be approximately 1.2 inches below the top edge of the basin (B).




Step 4: Finally, connect the plug of pump (C) to a GFCI outlet.WARNING: Always disconnect the pump (C) before placing your hands in the water.

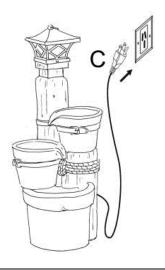

CARE AND MAINTENCE

- I To eliminate the possibility of water damage to areas around the fountain, check for leaks and excessive splashing after the initial set up of the fountain. It is highly recommended this fountain be placed in an area where it cannot be damaged.
- I Do not leave the fountain running for extended periods of time when no one is present to observe the performance.
- I Check the area around the fountain on a regular basis to ensure there is no leakage.
- I Do not attend to attempt to move fountain once filled with water.

Assembly Instructions for the Solar Post Light

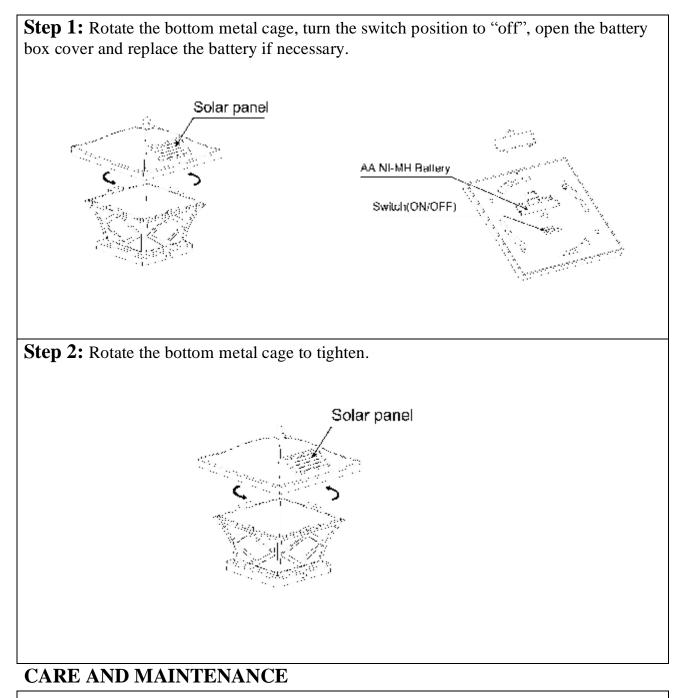

- I Charges in direct sunlight.
- I On & Off switch to turn the light on & off.
- Up to 6-8 hours of light each night when fully charged.
- No operating costs.
- **I** No wiring, simply handing in position and enjoy.