

Step 4: Finally, connect plug of pump (D) to a GFCI outlet.

WARNING